


# **\*\*ATTENTION\*\***




INSTRUCTIONS FOR INSTALLATION OF NZFD SMOKE SEALS (GAQ) - PLEASE READ THE FOLLOWING INSTRUCTIONS TO ENSURE THE BEST POSSIBLE RESULTS. SMOKE SEALS (GAQ) NEED TO BE FITTED TO ALL NZFD SMOKE AND FIRE RATED DOORS WITH TIMBER JAMBS.

## **BEFORE PAINTING**

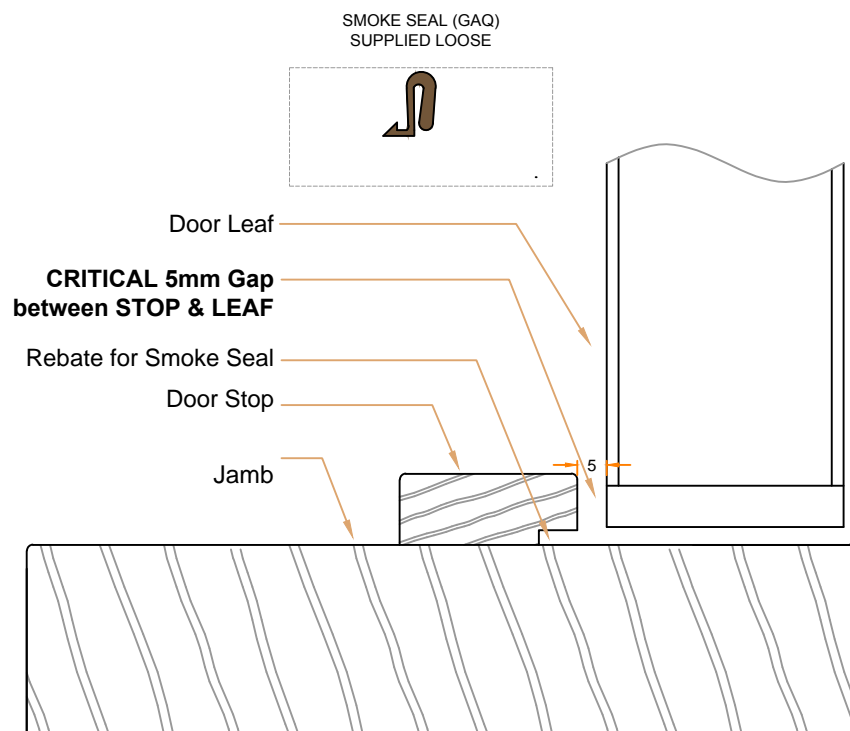

## **AFTER PAINTING**

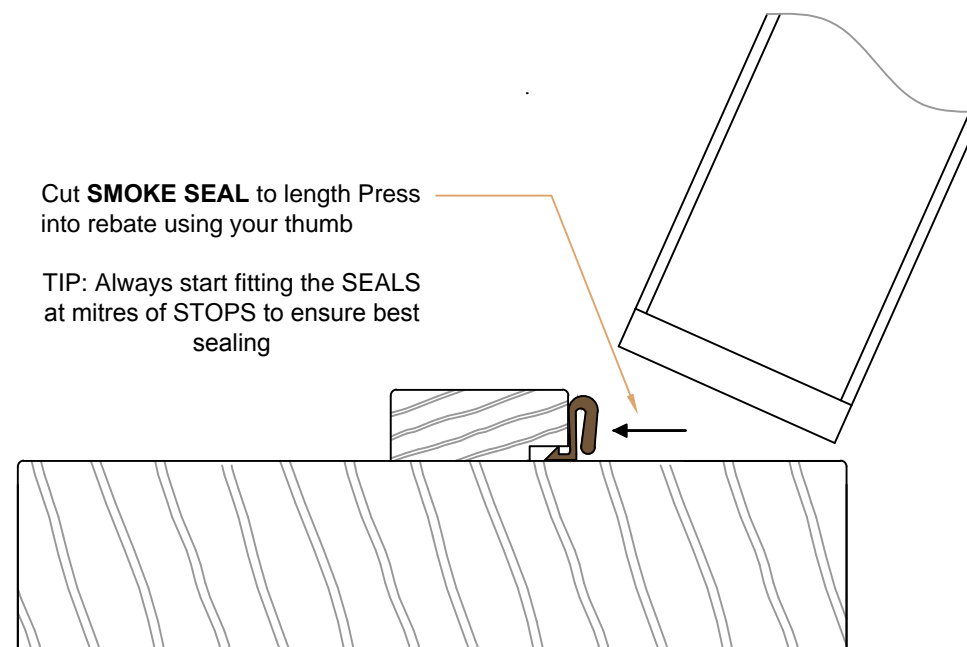

**PLEASE NOTE - SMOKE SEAL CANNOT BE PAINTED, INSTALL SMOKE SEAL AFTER PAINTING. REMOVE EXCESS PAINT FROM THE GROOVE TO ENSURE THE SEAL CAN BE INSTALLED CORRECTLY.**

**GAQ SEAL SHOULD BE IN PLACE WHEN INSTALLING STRIKER PLATES TO ENSURE THE CORRECT PLACEMENT OF THE STRIKERS.**